

# REVIZIONI OTVOR | HATCHES

Uputstvo za montažu | Mounting instructions

Tip | Model: AluSpeed® Safe

Pozicija | Position: Instalacioni i šaht-zidovi | Installation and shaft walls

Na zidnoj površini obeležite strukturalne dimenzije i potom isečite otvor u zidu.  
(Definisanje odgovarajuće veličine potrebnog otvora = visina rama + 20 mm / širina rama + 10 mm)

Mark the opening dimensions and cut out openings respectively observe opening for wall mounting. (Construction opening dimension = frame height + 20 mm / frame width + 10 mm)

Pažljivo podignite osigurač šarke vratanca uz pomoć šrafčigera i otkačite/izvadite krilo vrata iz rama.




Carefully lift the hinge plate of the inspection cap with a screwdriver and unhinge the door leaf.

Umetnite ram vratanca u otvor, potvrdite vertikalnost i potom lagano ih fiksirajte uz pomoć integrisanih elemenata. Proverite pravougaonost okvira.

Insert the frame into the opening, align with the mounting claws and slightly fix it. Check rectangularity of the frame.

Potom čvrsto fiksirajte ram za otvor uz pomoć integrisanih elemenata i ponovo proverite pravougaonost okvira.

Tightly fix the frame using the mounting claws and check again the rectangularity of the frame.

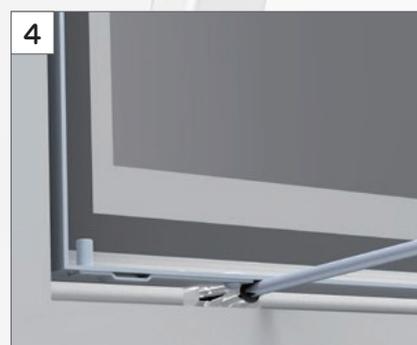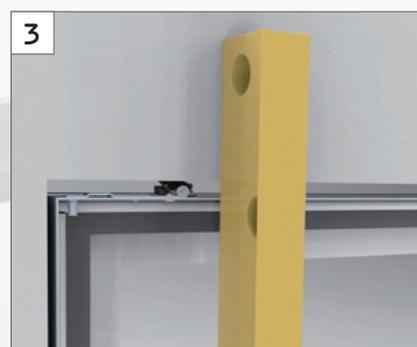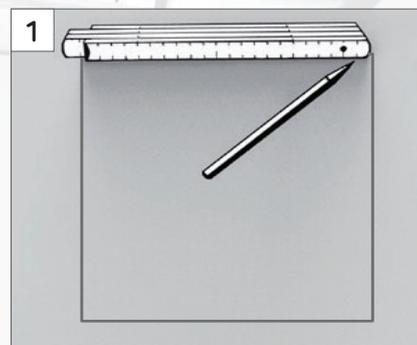

Zašrafite prethodno poravnati i za okvir fiksirani ram kroz postojeće bočne otvore za ovu namenu (preporuka Nida Metal Vijak za profile 212x55). Proverite ponovo pravougaonost rama i kao i da tokom eventualnog prenatrženog fiksiranja nije došlo do minimalne deformacije stranica.

Ugradnja u zidove klase EI90 od tradicionalnih materijala:

Iskoristite postojeće bočne otvore kako bi ste ram fiksirali za zid uz pomoć odgovarajućih negorivih tiplova.

Screw the aligned and fixed frame through the prefabricated fixing holes at the side with the wall (for example, quick-release screws 3,9 x 55 mm). Check rectangularity of the frame and verify that the frame is not under tension during installation.

Pažljivo ispunite šupljinu između rama i zida negorivim materijalima. Za sada ostavite prostor oko gornje šarke slobodnim, kako bi se omogućilo pričvršćivanje vratanca.

Carefully fill joints between frame and wall with non-combustible building materials. At first leave the upper hinges free to allow the door to be reattached.

Sada šupljinu između rama i zida u potpunosti ispunite ispunom za gips-kartonske ploče (preporuka NIDA Profesional-NIDA Profesional Fresh).

Now completely fill the cavity between the frame and the wall with plasterboard filling (recommendation: NIDA Profesional/NIDA Profesional Fresh).

**Postavite ponovo krilo vrata na ram i dobro zatvorite.**

Napomena: predviđena zaštita od požara je zagantovana samo ako su vrata zatvorena propisno!

**Replace door leaf and close tightly.**

Note: the indicated fire protection is only guaranteed if the inspection seal is closed properly!

