

# REVIZIONI OTVOR | HATCHES

## Uputstvo za montažu | Mounting instructions

Tip | Model: Alumatic, Alumatic-C, AluLight-C

Pozicija | Position: Plafon | Ceiling

Na plafonskoj površini obeležite strukturalne dimenzije i potom isečite otvor u zidu (otpr. 3-5mm veći nego što su nominalne dimenzije otvora).

Mark the structural dimension and cut an opening into the ceiling (approx. 3-5 mm larger than the nominal dimensions).

Odvojite vratanca od rama, koji potom dijagonalno provucite kroz isečeni otvor i onda da sa pozadine pozicionirajte na sam otvor.





Hang out the detachable flap lid, insert diagonally the panel frame through the opening and place it there.

Pozicionirati pravilno ram uz poštovanje idealnog ugla od 90 stepeni izmedju stranica, potom privremeno fiksirajte položaj rama otvora stegom i obeležite mesta za primenu vijaka. Osovinski razmak vijaka bi trebao biti  $\leq 200$  mm. U slučaju da je model revizionog otvora koji sprečava prenos vazduha i prašine, razmak rupa bi trebao biti  $\leq 100$  mm.

Adjust the frame (check angularity), fasten it and mark the drill holes, Drill distance  $\leq 200$  mm. Drill distance in case of access panel Alumatic "air-tight and dust-tight":  $\leq 100$  mm.

Najpre izbušite rupe bišilicom i burgijom prečnika 3mm i potom primenite vijke i zaštitne kapice koje su došle zajedno u setu.

Drill the mounting frame and fit the screws with the protective caps that are supplied along. Drill with a drilling machine of 3 mm through the gypsum and the wings of the frame then place the screws.

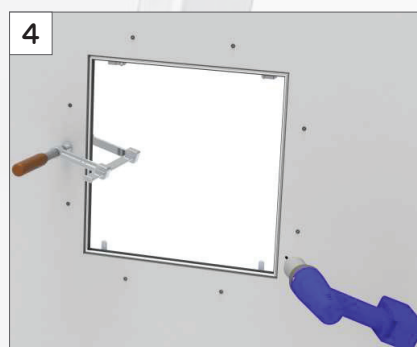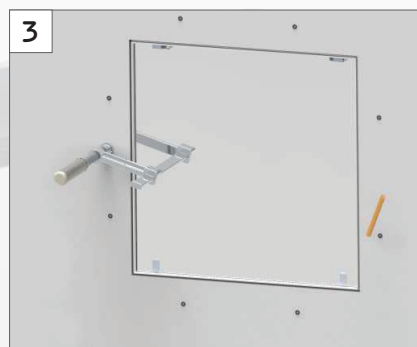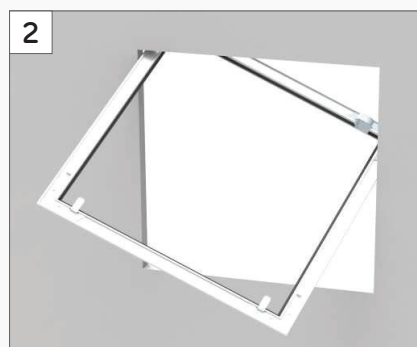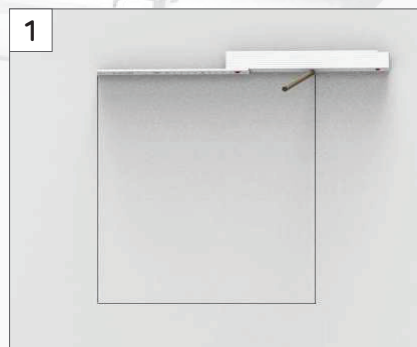

Šupljinu između rama i obodne gips kartonske ploče na zidu popuniti ispunom za spojeve. Po sušenju očistite stranice rama od ostataka ispunne i drugih nečistoća nastalih tokom ugradnje.

Fill the mounting frame and the flap lid separately using a joint filler. Clean the metallic interior and side surfaces of the mounting frame and the door leaf after further coating of putty and paint residues!

Potom je neophodno izvršiti test funkcionalnosti proizvoda (otvoriti, skinuti vratanica, vratiti ih, zatvoriti).

Then perform functional test (insert, close, open).  
Fit the flap lid, fix the arresting device and close the flap lid.

U slučaju da revizioni otvor čini opterećenje plafona veće od 7kg/m<sup>2</sup>, ne zaboraviti da je neophodna ugradnja perimetarnog ojačanja od suvomontažnih profila sa razmakom od oko 5 mm do rama proizvoda.

Install the support profile CD with a gap of 5 mm at each side between the mounting frame.

Ukoliko proizvod sadrži i gornji zaštitni deo, ne zaboraviti njegovu montažu. Prenos njegove težine treba izvršiti na perimetarne CD profile u skladu sa detaljem poprečnog preseka A-A.

Please respect the position of the fire protection set according to the above diagram, on CD profiles and place the lid. Fire protection in case of fire from above!  
Section A-A / 2-part fire protection set / removable flap lid

